

Enter setting mode:



Exit setting mode:



Version:



Factory default:



Set changing as default mode:



Languages

USA



German



France



Spanish



Italian



Japanese



International common language:



Belgium:



Portuguese



English



German IOS keyboard: (for Apple)



Brazil



Russia



Czech



Italian 142



Turkey Q:



Hungary:



Turkey F:



Poland:



Swedish(Finland):



Canada(France):



Mexico:



Argentina (Latin American):



Denmark:



Slovak:



Norway:



Input GBK:



Croatian:



Input UTF:



Sweden(Germany)



Enforce Pair with Dongle:



Sweden(France)



Mute:



Holland



Low volume:



Medium volume:



%%SpecCode96

High volume:



%%SpecCode97

Buzzer frequency 2K:



%%SpecCode7C

Buzzer frequency 2.7K



%%SpecCode7D

Enter normal mode:



%%SpecCode10

Enter inventory mode:



%%SpecCode11

Upload data:



%%SpecCode16

Show total storage entries:



%%SpecCode17

Clear inventory data:



%%SpecCode18

Sleep time 30S:



%%SpecCode30

Sleep time 1 minute:



%%SpecCode31

Sleep time 2 minutes:



%%SpecCode32

Sleep time 5 minutes:



%%SpecCode33

Sleep time 10 minutes:



%%SpecCode34

Sleep time 30 minutes:



%%SpecCode35

Never sleep



%%SpecCode36

Sleep immediately



%%SpecCode38

Show left battery:



%%SpecCode15

Scanner head sound:



%%SpecCode28

Master MCU sound:



%%SpecCode29

Turn on vibration:



%%SpecCode77

Turn off vibration:



%%SpecCode76

Fast transmission:



Medium speed transmission:



Low-speed transmission:



Ultra low speed transmission:



2.4G mode:



Virtual Bluetooth mode:



Bluetooth HID mode:



Bluetooth SPP mode:



Bluetooth BLE mode:



Android input mode:



Virtual serial port mode:



Set bluetooth name:



How to set the Bluetooth name: Scan the Bluetooth name barcode first, and then scan a barcode, this barcode will be set as the Bluetooth name.

Note:

a) The name can only be set to a maximum of 16 bytes. If the name bar code exceeds 16 bytes, the scanner will only take the first 16 bytes as the Bluetooth name.

b) The complete Bluetooth name includes: Bluetooth name + protocol type, and only supports to modify the Bluetooth name. After modifying the Bluetooth name, the names of all Bluetooth protocols have been changed. For example: if the Bluetooth name is set as "Scanner", the name of Bluetooth HID is: ScannerHID, the name of SPP is: ScnanerSPP, and the name of BLE is: ScannerBLE

Read Bluetooth name:



Enable long press button to enter HID search:



Disable long press button to enter HID search:



HID keyboard pop-up/hide:



Hide 4 digits:



Turn off double click to pop up/hide the HID keyboard:



Add CR:



Turn on double click to pop up/hide the HID keyboard:



Add LF:



Turn on GS conversion character



Add CR&LF:



Turn off GS conversion character



Add Tab:



To hide the barcode, scan the front part of the hidden barcode or the back part of the hidden barcode first, then scan the hidden digits, and hide 4 bytes at most

No add at end:



Hide the front part of the barcode



Cast to lowercase:



Hide the back part of the barcode



Cast to uppercase:



Hide 1 digit:



Case swap:



Hide 2 digits:



Do not convert case:



Hide 3 digits:

